

Part Number D301244X012

February 2016

# DL8000 Preset Controller Instruction Manual



## Revision Tracking Sheet February 2016

This manual may be revised periodically to incorporate new or updated information. The revision date of each page appears at the bottom of the page opposite the page number. A change in revision date to any page also changes the date of the manual that appears on the front cover. Listed below is the revision date of each page (if applicable):

<b>Page</b>	<b>Revision</b>
All pages	February-2016
	Mar-2012
All pages	Revised content in Chapters 1 through 3 and reorganized and enhanced appendixes (removed former Appendix B, <i>Installation and Configuration</i> , and Appendix C, <i>Point Types</i> ; and added keypad display content as new Appendix E)
All pages	May-2010
All pages	Sep-2009
	Removed Chapter 2, renumbered Chapters 3 and 4
All pages	Oct-2008
All pages	Jul-2008
All pages	Feb-2008
All pages	Oct-2007
Initial issue	Nov-2006

# Contents

<b>Chapter 1 – Overview</b>	<b>1-1</b>
1.1 DL8000 Overview .....	1-1
1.2 Hardware .....	1-3
1.2.1 Housing .....	1-3
1.2.2 Electronics .....	1-5
1.3 Security Gateway.....	1-6
1.4 Additional Technical Specifications .....	1-6
<b>Chapter 2 – Installation and Use</b>	<b>2-1</b>
2.1 Housing.....	2-1
2.1.1 Class I Zone 1 Housing.....	2-2
2.1.2 Securing the Cover to the Class I Zone I Case.....	2-4
2.1.3 Class I Div 2 Housing .....	2-5
2.2 Card Cage .....	2-6
2.2.1 Backplane.....	2-7
2.3 Central Processor Unit (CPU) .....	2-8
2.3.1 Installing and Removing Wire Channel Covers.....	2-10
2.3.2 Removing and Installing Module Covers.....	2-11
2.3.3 Removing the CPU Module.....	2-11
2.3.4 Installing the CPU Module.....	2-12
2.4 License Keys .....	2-12
2.4.1 Installing a License Key.....	2-13
2.4.2 Removing a License Key.....	2-14
2.5 Installation Planning.....	2-15
2.6 Mechanical Installation .....	2-15
2.6.1 Planning Considerations .....	2-16
2.7 Electrical Installation.....	2-18
2.7.1 General Considerations.....	2-18
2.7.2 Field Wiring Installation Guidelines: .....	2-18
2.7.3 Electrical Wire and Cable Selection and Installation.....	2-19
2.7.4 Input/Output Field Signal Wiring .....	2-20
2.7.5 Electrical Grounds .....	2-20
2.7.6 Wire Conduit Selection and Installation .....	2-22
2.8 Operator Interface.....	2-23
2.8.1 Keypad .....	2-24
2.8.2 LED Status Indicators.....	2-25
<b>Chapter 3 – Modules</b>	<b>3-1</b>
3.1 Power Input Module.....	3-1
3.1.1 12 Volt DC Power Input Module.....	3-2
3.2 Input/Output Modules .....	3-3
3.2.1 General Installation .....	3-5
3.2.2 Installing an I/O Module.....	3-6
3.2.3 Removing an I/O Module.....	3-7
3.2.4 Wiring I/O Modules .....	3-7
3.2.5 Analog Input (AI) Modules.....	3-7
3.2.6 Analog Output (AO) Modules .....	3-9
3.2.7 Discrete Input (DI) Modules.....	3-10
3.2.8 Pulse Input (PI) Modules .....	3-12

3.2.9	Discrete Output (DO) Modules .....	3-14
3.2.10	Discrete Output Relay (DOR) Modules .....	3-15
3.2.11	Resistance Temperature Detector (RTD) Input Modules .....	3-17
3.2.12	Alternating Current Input/Output (AC I/O) Module .....	3-18
3.2.13	Advance Pulse Module (APM).....	3-23
3.2.14	Thermocouple (TC) Input Module .....	3-27
3.2.15	Highway Addressable Remote Transducer (HART®) Module.....	3-30
3.3	Communication Modules and Ports .....	3-32
3.3.1	Wiring Communications .....	3-34
3.3.2	Local Operator Interface (LOI – Local Port).....	3-35
3.3.3	Using the LOI .....	3-36
3.3.4	Ethernet Communications.....	3-36
3.3.5	EIA-232 (RS-232) Serial Communications .....	3-38
3.3.6	EIA-422/485 (RS-422/485) Serial Communications Module .....	3-39
3.3.7	EIA-422/485 (RS-422/485) Jumpers and Termination Resistors .....	3-40
3.3.8	Dial-up Modem Communications Module .....	3-41
3.4	Additional Technical Information .....	3-43

---

<b>Appendix A – Glossary</b>	<b>A-1</b>
------------------------------	------------

---

<b>Appendix B – Modbus Communications</b>	<b>B-1</b>
---	------------

---

B.1	Modbus Communications .....	B-1
B.2	Modbus Configuration .....	B-2
B.2.1	Modbus Configuration General Tab .....	B-3
B.2.2	Modbus Configuration Scale Values Tab .....	B-5
B.3	Modbus History.....	B-7
B.3.1	Modbus Configuration History Table Tab .....	B-8
B.4	Modbus Events & Alarms Functionality.....	B-11
B.4.1	Reading Events & Alarms Register .....	B-11
B.4.2	Acknowledging Events & Alarms.....	B-11
B.5	Modbus Registers.....	B-12
B.5.1	Modbus Configuration Registers Tab .....	B-14
B.5.2	Modbus Conversion.....	B-17
B.6	Modbus Master Table.....	B-19
B.6.1	Modbus Configuration Master Table Tab .....	B-20
B.7	Modbus Master Modem.....	B-22
B.7.1	Modbus Configuration Master Modem Tab .....	B-22
B.8	HMI Information .....	B-24
B.8.1	Sequential Blending.....	B-24
B.8.2	Ratio Blending .....	B-25

---

<b>Appendix C – Wiring Diagrams</b>	<b>C-1</b>
-------------------------------------	------------

---

C.1	Daniel Senior Sonic Meter to PI Module .....	C-1
C.2	Daniel 1818A and 1838 Turbine Pre-Amp to PI Module .....	C-2
C.3	Micro Motion RFT9739 & 2400S Transmitters to PI Module.....	C-3
C.4	Micro Motion RFT9739 & 2400S Transmitters to APM Module .....	C-4
C.5	3- and 4-Wire RTD to RTD Module .....	C-5
C.6	Daniel Senior Sonic Meter to APM Module .....	C-6
C.7	Daniel 1818A and 1838 Dual Turbine Pre-Amp to APM Module .....	C-7
C.8	Daniel 1818A and 1838 Turbine Pre-Amp to APM Module.....	C-8
C.9	Two-Stage Valve with Two Limit Switches to APM Module .....	C-9
C.10	Micro Motion 1700 & 2700 Transmitter to PI Module .....	C-10

<b>Appendix D – Communications Protocols</b>		<b>D-1</b>
D.1	Introduction .....	D-1
D.1.1	Communication Channels .....	D-2
D.1.2	Communications Failure .....	D-2
D.1.3	Supported Protocols .....	D-3
D.1.4	Configuration .....	D-5
D.1.5	Commands .....	D-6
D.1.6	Status Flags .....	D-7
D.2	Batch Control in Auto Mode.....	D-8
D.2.1	Steps for Authorizing a Transaction .....	D-8
D.2.2	Steps for Authorizing a Batch .....	D-11
D.2.3	Stop/End of Batch .....	D-12
D.2.4	End of Transaction.....	D-13
D.2.5	Batching Status States .....	D-14
D.3	Communications Commands .....	D-15
D.3.1	Modbus Commands.....	D-15
D.3.2	DanLoad 6000 Protocol Commands .....	D-30
D.4	Mapping Modbus Registers.....	D-73
D.5	DanLoad 6000 Protocol Frame .....	D-76
D.6	BCC Calculation .....	D-77
D.7	CRC-16 Checksum Table.....	D-78
D.8	Status Flags Description [63,0,119].....	D-80
D.9	Exception Codes.....	D-85
D.10	New/Unused DanLoad 6000 Exception Codes .....	D-87
D.11	Alarm Logs .....	D-88
D.12	Error Codes.....	D-90
 <b>Appendix E – DL8000 Keypad Display</b>		<b>E-1</b>
E.1	Keypad Display Components .....	E-1
E.1.1	Keypad .....	E-2
E.1.2	LED Status Indicators .....	E-4
E.1.3	Liquid Crystal Display (LCD).....	E-5
E.1.4	Power Failure .....	E-5
E.1.5	Operational Modes.....	E-6
E.2	Loading Mode .....	E-6
E.2.1	Recipe Selection .....	E-6
E.2.2	Invalid Recipe Selection.....	E-7
E.2.3	Additive Selection.....	E-7
E.2.4	Data Item Prompt.....	E-7
E.2.5	Preset Quantity .....	E-8
E.2.6	Invalid Preset .....	E-8
E.2.7	Loading .....	E-8
E.2.8	Transaction End Prompt .....	E-10
E.2.9	Conditional String Display for Temperature Correction String.....	E-10
E.3	Program Mode .....	E-12
E.3.1	ROCLINK 800 Configuration.....	E-12
E.3.2	Log In .....	E-14
E.3.3	Initial Menu .....	E-14
E.3.4	Clear Alarms .....	E-15
E.3.5	Select Language .....	E-15
E.3.6	Print Record .....	E-15
E.3.7	Display Setting .....	E-16
E.3.8	Current Status .....	E-16
E.3.9	Setup/ Configuration .....	E-22
E.3.10	Generic TLP for Setup and Status .....	E-45

- E.3.11 Online Help..... E-47
- E.4 Calibration..... E-49
  - E.4.1 Calibrating Additive Meters ..... E-50
  - E.4.2 Calibrating Analog Input..... E-53
  - E.4.3 Calibrating RTDs..... E-55
  - E.4.4 Calibrating Product Meters ..... E-59
- E.5 Diagnostics ..... E-75
  - E.5.1 Diagnosing Digital Outputs (DO) ..... E-75
  - E.5.2 Diagnosing Digital Inputs (DI) ..... E-76
  - E.5.3 Diagnosing Analog Outputs (AO)..... E-81
  - E.5.4 Diagnosing Analog Inputs (AI) ..... E-85
  - E.5.5 Diagnosing AC Input/Outputs (AC I/O)..... E-89
  - E.5.6 Diagnosing RS-232 Communication Ports ..... E-93
  - E.5.7 Diagnosing RS-485 Communication Ports ..... E-97
  - E.5.8 Error Messages..... E-100
  - E.5.9 Translated Alarm and Status Messages ..... E-101